


Adjusting Spot Out

Created	@July 16, 2025 2:21 PM
Tags	Live View

Step 1

Adjusting of spot out is now done on the live view of the main output. Click on the HDMI1/VGA output option in the top left. A drop down menu with the options for spot out will appear. Select the spot out that is to be configured.

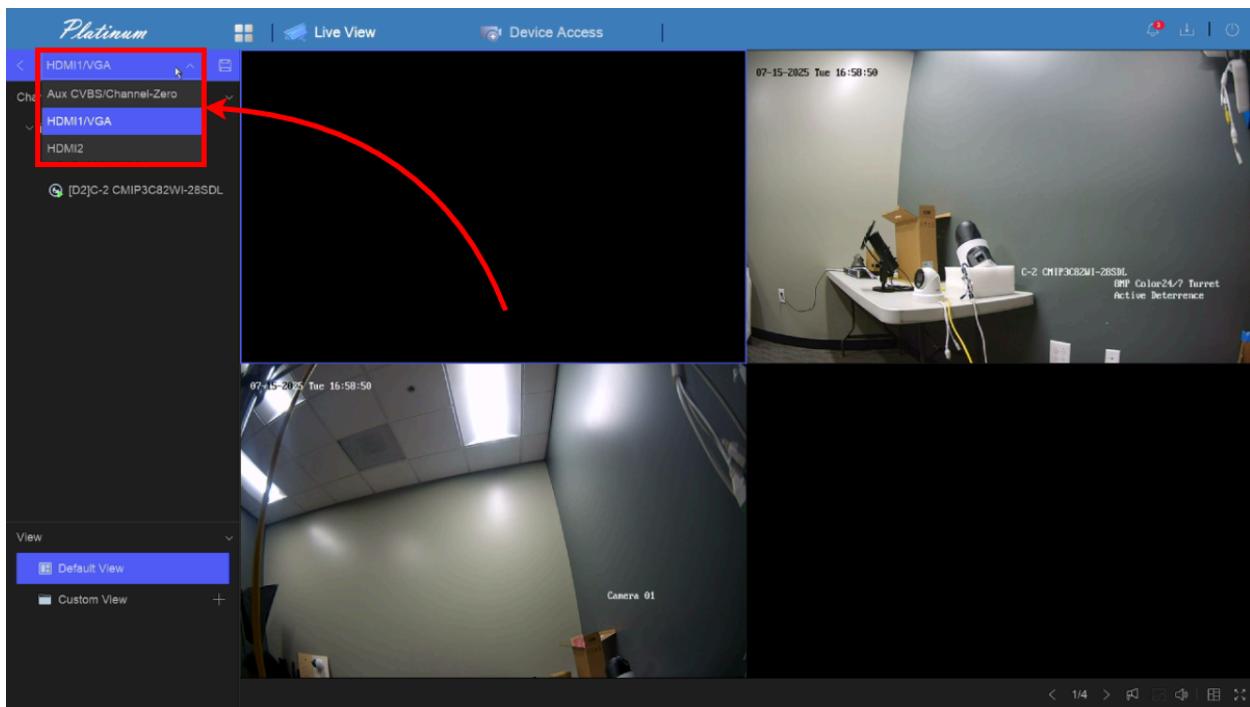

Step 2

Confirm that the selection is correct. Now the view can be configured just like with the standard live view in the first section.

