

# Control4 Driver Setup



Welcome to choose LTS Product.

Here is the instruction for your Control4 Driver settings.

1. Please download the Control4 Driver

from the LTS website.

Go to [www.ltsecurityinc.com](http://www.ltsecurityinc.com)

Company -> Partner -> Control4

Or, here is the download [LINK](#)

2. Download the Control4 Driver from the list.

Unzip it. You should get the Driver .c4i file.

We need it later.

 recorder\_ip\_http\_LTS\_IPC.c4i



Model	HC250	HC800	EA1	EA3	EA5
CMIP1132	✓	✓	✓	✓	✓
CMIP1132-28	✓	✓	✓	✓	✓
CMIP2010	✓	✓	✓	✓	✓


3. Now, run Control4 composer and we are ready to program it.

Select Local System and Choose the EA controller & Connect.


4. Here is the Composer Looks like

5. Load the driver first. Go to Driver, and choose Add or Update Driver...

recorder\_ip\_http\_LTS\_IPC.c4i

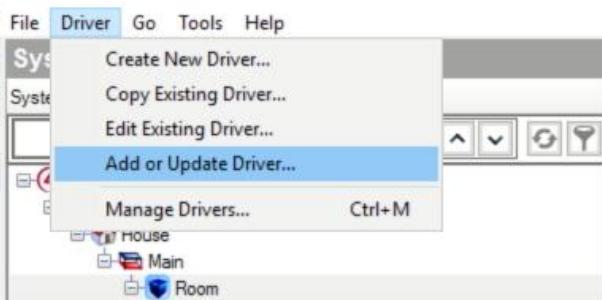

Then, select the driver, if you already loaded, overwrite again.

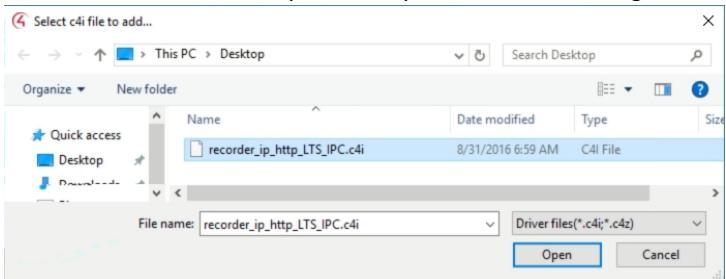

6. Then, we are ready to add the driver.  
Choose **Room** from the design.  
Go to item Search Tab from the right

Remove  Online, and type  
**LTS** in the search. <center>



Double-click the item to add

Or, you can go Discovered to add it.  
(check Control4 KB for IT)

7. This is how it looks like.

Composer 2.8.1 - New Project (Local)

File Driver Go Tools Help

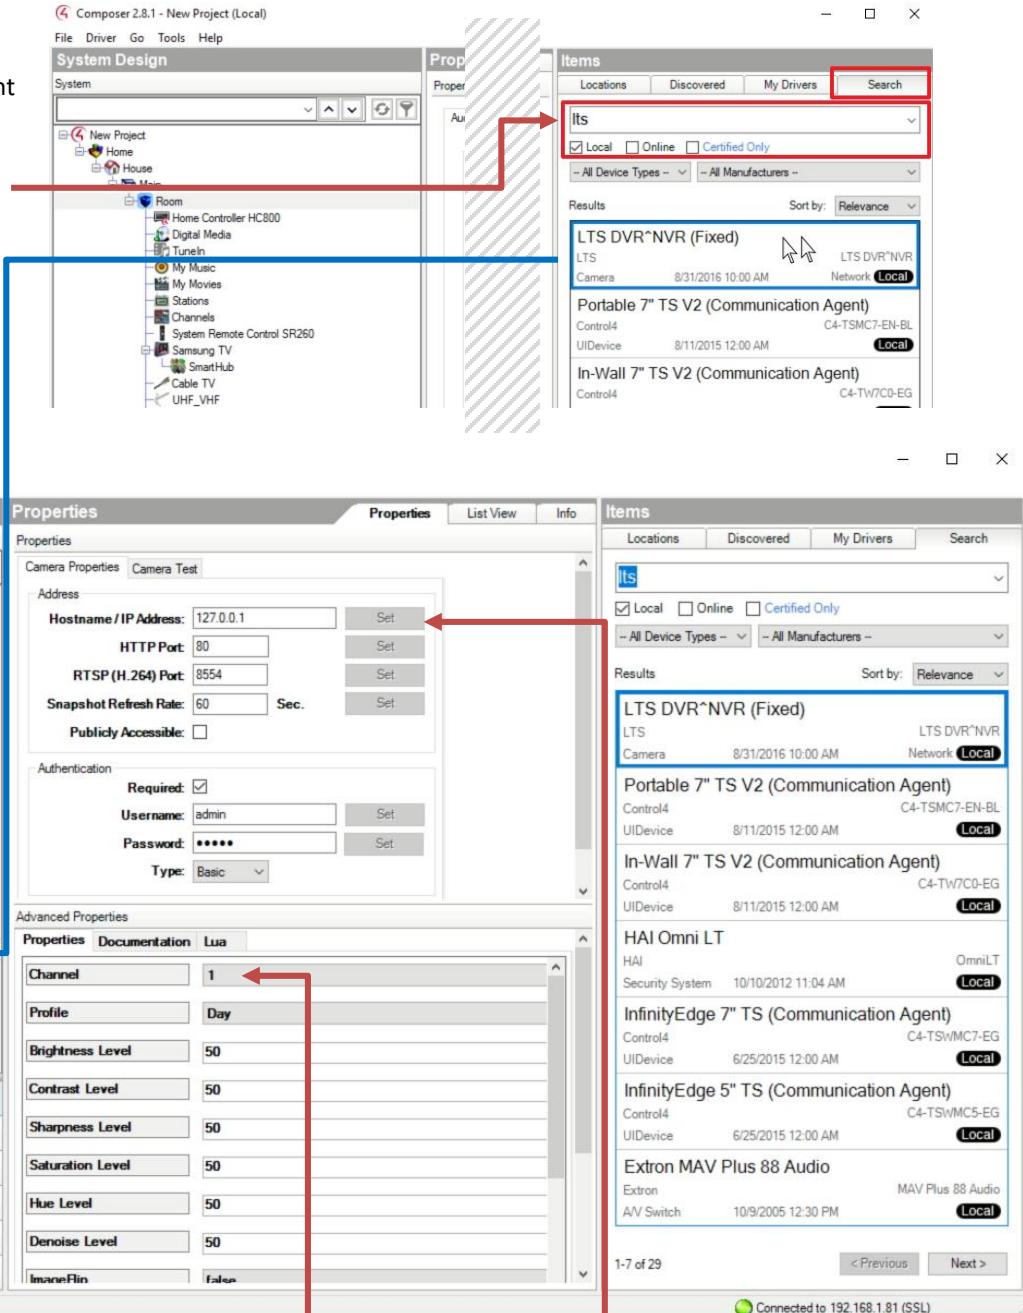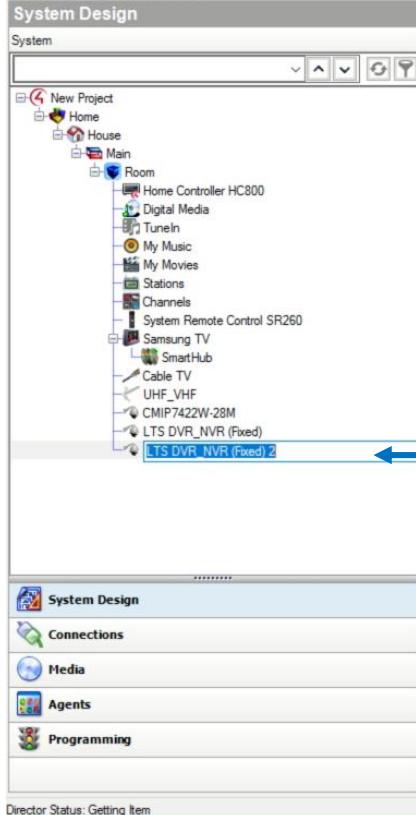


8. You need to program the properties. For example, IP address and Username & Password  
9. And, specify the Channel number (if it is the NVR)

10. Click **Camera Test**  
to make a test

Click  
**Get Snapshot URL,**  
**Test**


If it went thru, there  
should be a green check  
mark.

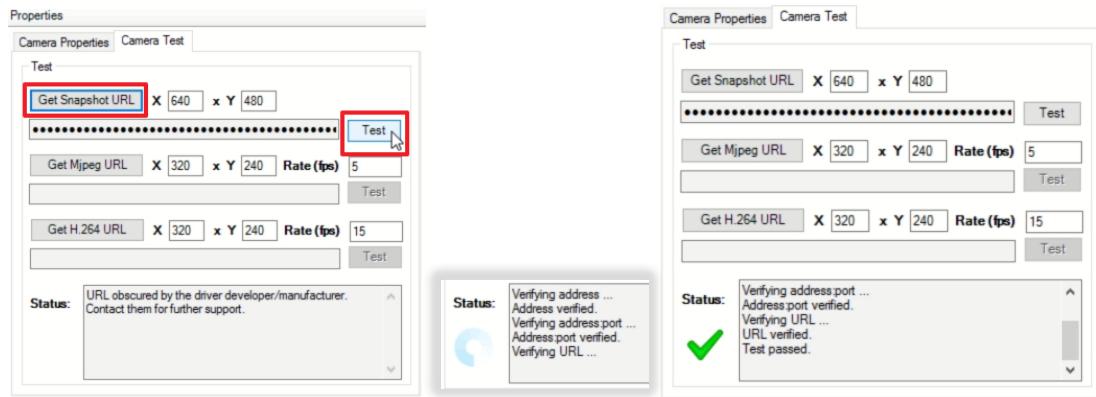

Don't forget backup and refresh the Navigator when finish

Congratulation, you are just complete the setting.

For more information, please check KB – Control4 Driver (IT)

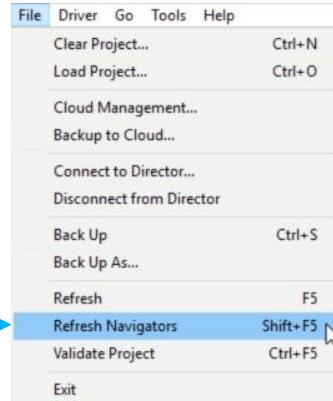

Go to Control 4 Monitor Screen, Select Security and View it.

