

# Setup

Created	@November 5, 2025 8:41 AM
Tags	


## NVR5.0 Setup

By default DeepVision/Direct Search is enabled on the NVR.


### Browser Setup

Navigate to Event Center on the left side menu bar.

Change the Engine Mode 1 from "Unloaded" to "Direct Search", Engine Mode 2 from "Unloaded" to "DeepVision", afterwards click save.

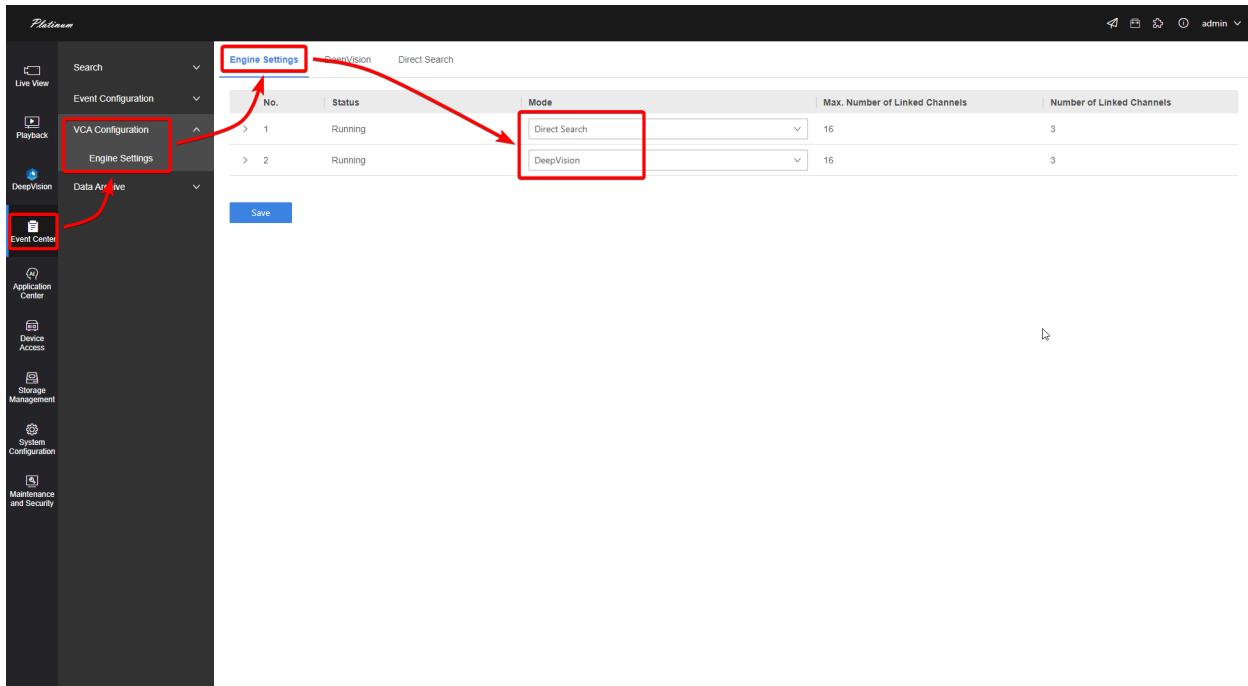

The status will change from "Initializing analysis engine..." to "In progress". The page will not auto update the status, manually refresh the page or change to a different tab and return to confirm that the status is updated.

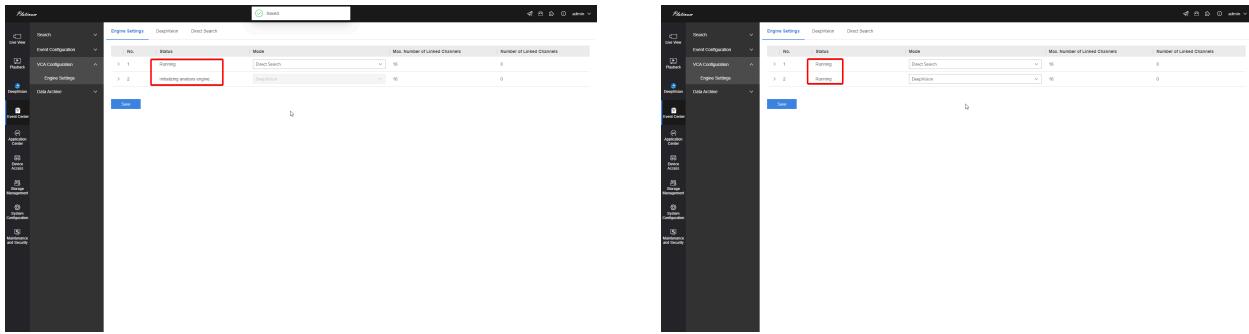

Afterward, go to the "Direct Search" tab, toggle the Enable slider, check all cameras that are to do direct search, and finally click "Save". Repeat these steps in the DeepVision tab.

