Firmware Update

1. Click **Admin** > **Software Settings**

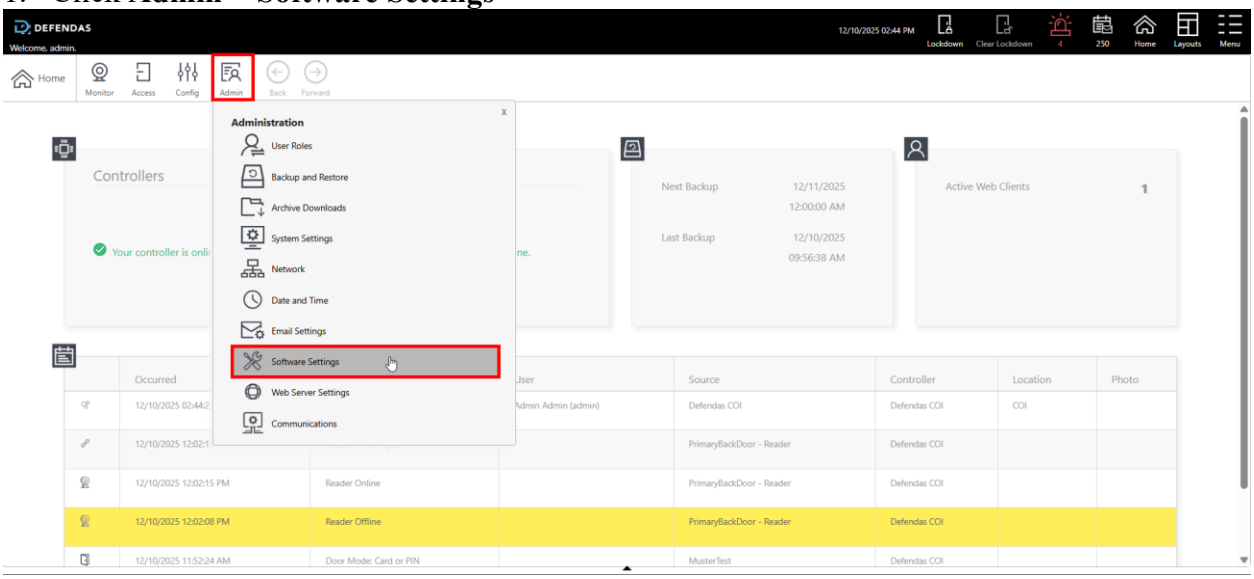
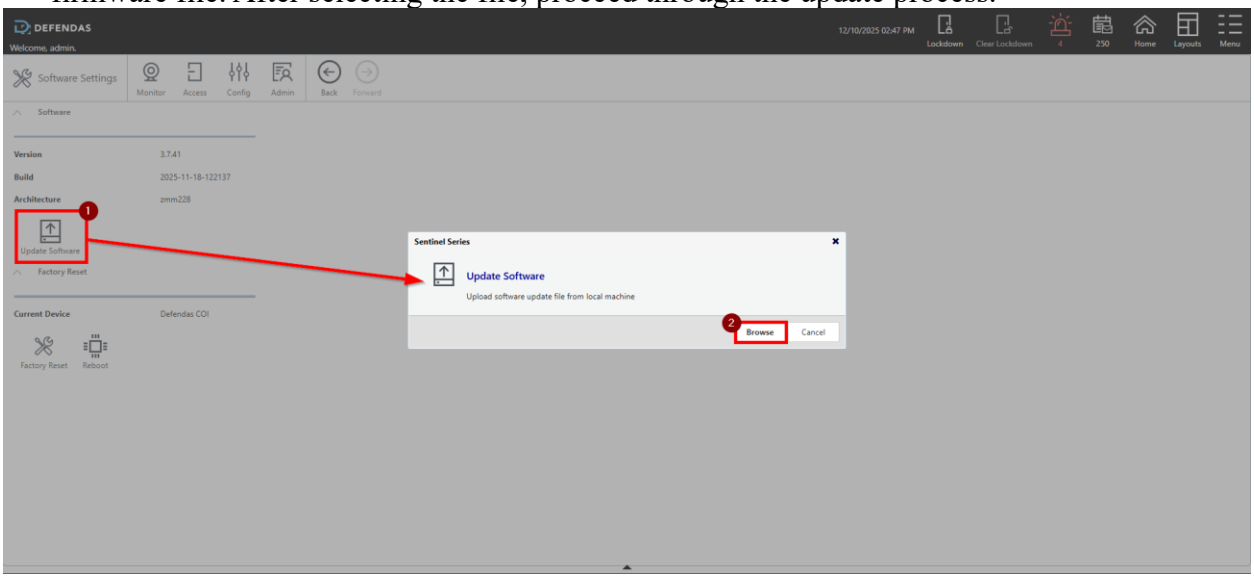
2. Click **Update Software** to open the prompt window, then browse the PC to select the firmware file. After selecting the file, proceed through the update process.